


Jan 4, 2012

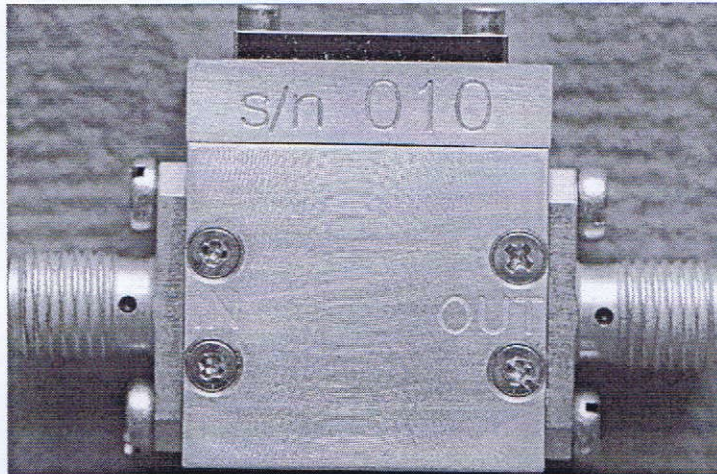


Absolute maximum ratings

Parameter	Min	Max
V_{ds}	-0.5 V	4 V
I_{ds}		150 mA
V_{gs}	-10 V	+7 V
RF Input drive level		0 dBm


Nominal bias @ 296 K

Parameter	Value
V_{ds}	2.30 V
I_{ds}	51 mA
V_{gs}	-6.63 V

Measured data, $T_{amb}=296\text{ K}$

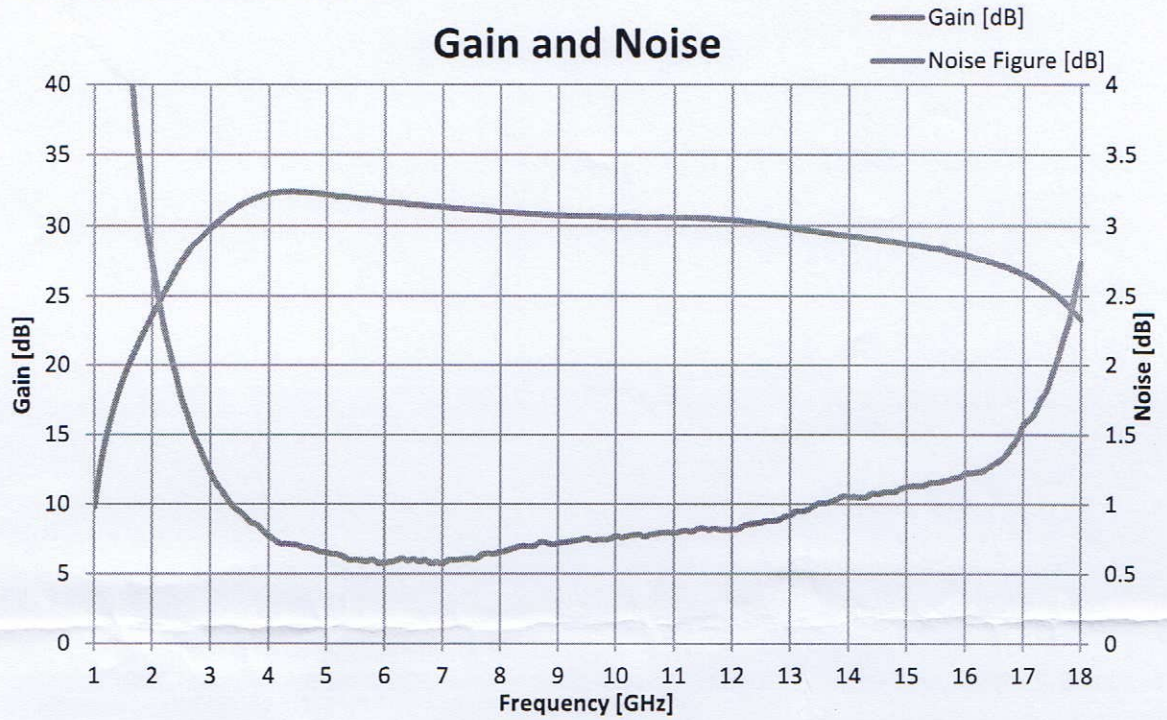

Nano-D panel connector seen from outside the LNA

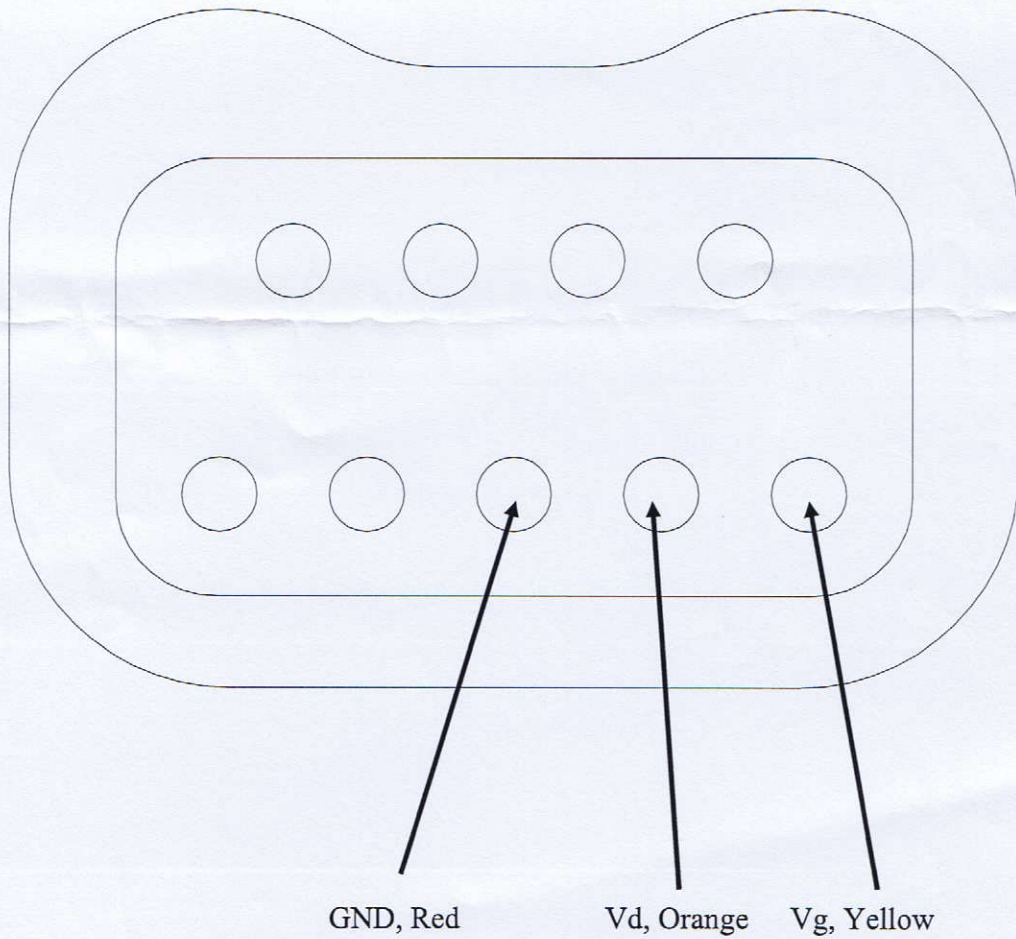



LNF-LNR4_14A s/n 160

4-14 GHz Low Noise Amplifier

Biasing procedure

For safe operation of the LNA, please carefully follow the instructions below. Always honor the maximum ratings stated in the datasheet.

With constant current supply, e.g. LNF-PS_2

LNF-PS_2 is pre-tuned to the nominal bias of your LNA.

Power up:

1. Switch on the power supply
2. Double check that V_d is set to the nominal voltage in the datasheet
3. Connect the LNA's RF input and output to your grounded test set-up
4. Connect the power supply to the LNA
5. Check that the measured I_{ds} is equal to the nominal value in this datasheet. Tune to the correct value if necessary.

Power down:

1. Disconnect the power supply from the LNA
2. Disconnect the LNA's RF input and output
3. Switch off the power supply

With constant voltage supply, e.g. LNF-PS_1

LNF-PS_1 is pre-tuned to the nominal bias of your LNA.

Power up:

1. Switch on the power supply
2. Set V_d and V_g to the nominal voltages stated in this datasheet
3. Connect the LNA's RF input and output to your grounded test set-up
4. Connect the power supply to the LNA
5. Fine tune V_g to get the nominal I_{ds} stated in this datasheet. The actual V_g can deviate a bit from the value in the datasheet depending on ground wire resistance in your set-up.

Power down:

1. Disconnect the power supply from the LNA
2. Disconnect the LNA's RF input and output
3. Switch off the power supply